

OWNER'S MANUAL

MODEL #:

TG1642H HONEY
TG1642C CHERRY
TG1642E ESPRESSO

NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS IMPORTANT SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

DATE OF PURCHASE:


____ / ____ / ____

UPC CODE:

0-65857-14154-2 HONEY
0-65857-14152-8 CHERRY
0-65857-14153-5 ESPRESSO

Distributed By:
Target Corporation
Minneapolis MN, 55403

GLIDER ROCKER

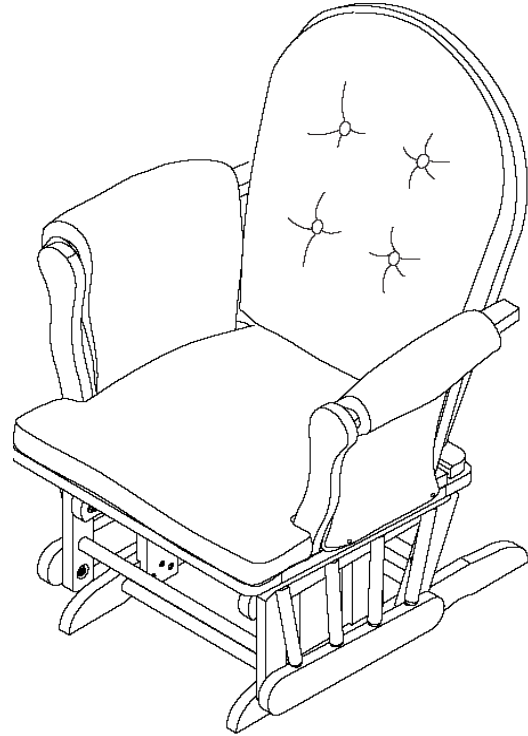

RECEIPT OF PURCHASE:

ATTACH HERE

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our
customer service department.

We will replace the part **FREE** of charge.



Tel # : 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada H1G 3L1**

E-MAIL: das@dorel.com



WARNING

- DO NOT leave children unattended on or beside the chair .
- DO NOT use your chair as a step stool.
- DO NOT sit on the edge of the seat, armrests or on the backrest as this could make the chair tip over.

NOTES

- * Ensure that all parts and components are located before beginning assembly.
- * If any parts are damaged or missing, please contact Our Customer Service for replacement parts.
- * Assembly may require two people.
- * Assemble on soft surfaces to prevent damage to the product finish.
- * Read all instructions completely before assembly.
- * Phillips head screwdriver is not included
- * Do not use power tools.
- * CAUTION: Adult assembly required.
- * Cushions must not be machine washed. Dry clean only.
- * Estimated assembly time: 20 minutes
- * **To purchase the matching ottoman (TG1642OH- honey / TG1642OC - cherry) / TG1642OE-espresso), please visit www.target.com**

CARE AND CLEANING

Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

DOREL ASIA SRL LIMITED WARRANTY

Dorel Asia SRL warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing or fading of the fabric is not covered under the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

 
 



 


WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

GLIDER ROCKER





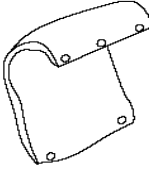
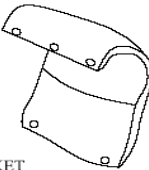
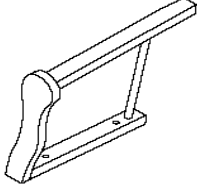
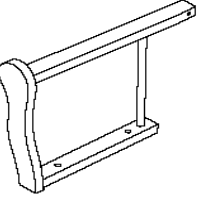
TG1642H / TG1642C / TG1642E

HARDWARE LIST

<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">1</div>  <p style="text-align: center;">ø 1/4" X 1-3/4"</p> <p style="text-align: center;">HEX SOCKET HEAD BOLT 2 PCS</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">2</div>  <p style="text-align: center;">ø 1/4" X 1-1/2"</p> <p style="text-align: center;">HEX SOCKET HEAD BOLT 6 PCS</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">3</div>  <p style="text-align: center;">ø 1/4" X 1/2"</p> <p style="text-align: center;">SPRING WASHER 8 PCS</p>
<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">4</div>  <p style="text-align: center;">ø 1/4" X 1/2"</p> <p style="text-align: center;">BARREL NUT 2 PCS</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">5</div>  <p style="text-align: center;">4MM</p> <p style="text-align: center;">ALLEN KEY 1 PC</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">6</div>  <p style="text-align: center;">CUSHION SNAP WITH SCREW 4 PCS</p>

NOTE: Snaps are provided in the event of missing / damaged existing snaps.

PARTS LIST
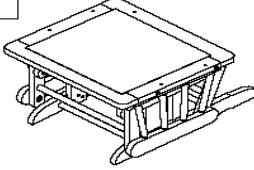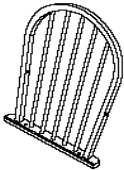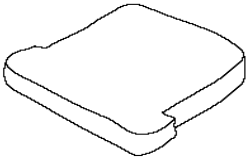
<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">A</div>  <p style="text-align: center;">BASE 1PC</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">B</div>  <p style="text-align: center;">BACK FRAME 1 PC</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">C</div>  <p style="text-align: center;">SEAT CUSHION 1 PC</p>
<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">D</div>  <p style="text-align: center;">BACK CUSHION 1 PC</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">E</div>  <p style="text-align: center;">NO POCKET</p> <p style="text-align: center;">LEFT ARM CUSHION 1 PC</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">F</div>  <p style="text-align: center;">WITH POCKET</p> <p style="text-align: center;">RIGHT ARM CUSHION 1 PC</p>
<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">GL</div>  <p style="text-align: center;">LEFT ARM ASSEMBLY 1 PC</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">GR</div>  <p style="text-align: center;">RIGHT ARM ASSEMBLY 1 PC</p>	

NOTE: Cushions to be dry cleaned only . DO NOT MACHINE WASH .


GLIDER ROCKER

TG1642H / TG1642C / TG1642E

STEP 1

Attach the back frame (B) to the base (A) with hex socket head bolts (2) and spring washer (3). Use Allen Key (5) to tighten bolts.

NOTE : LEAVE BOLTS LOOSE TO ALLOW EASIER ASSEMBLY OF ARMS IN FOLLOWING STEPS.

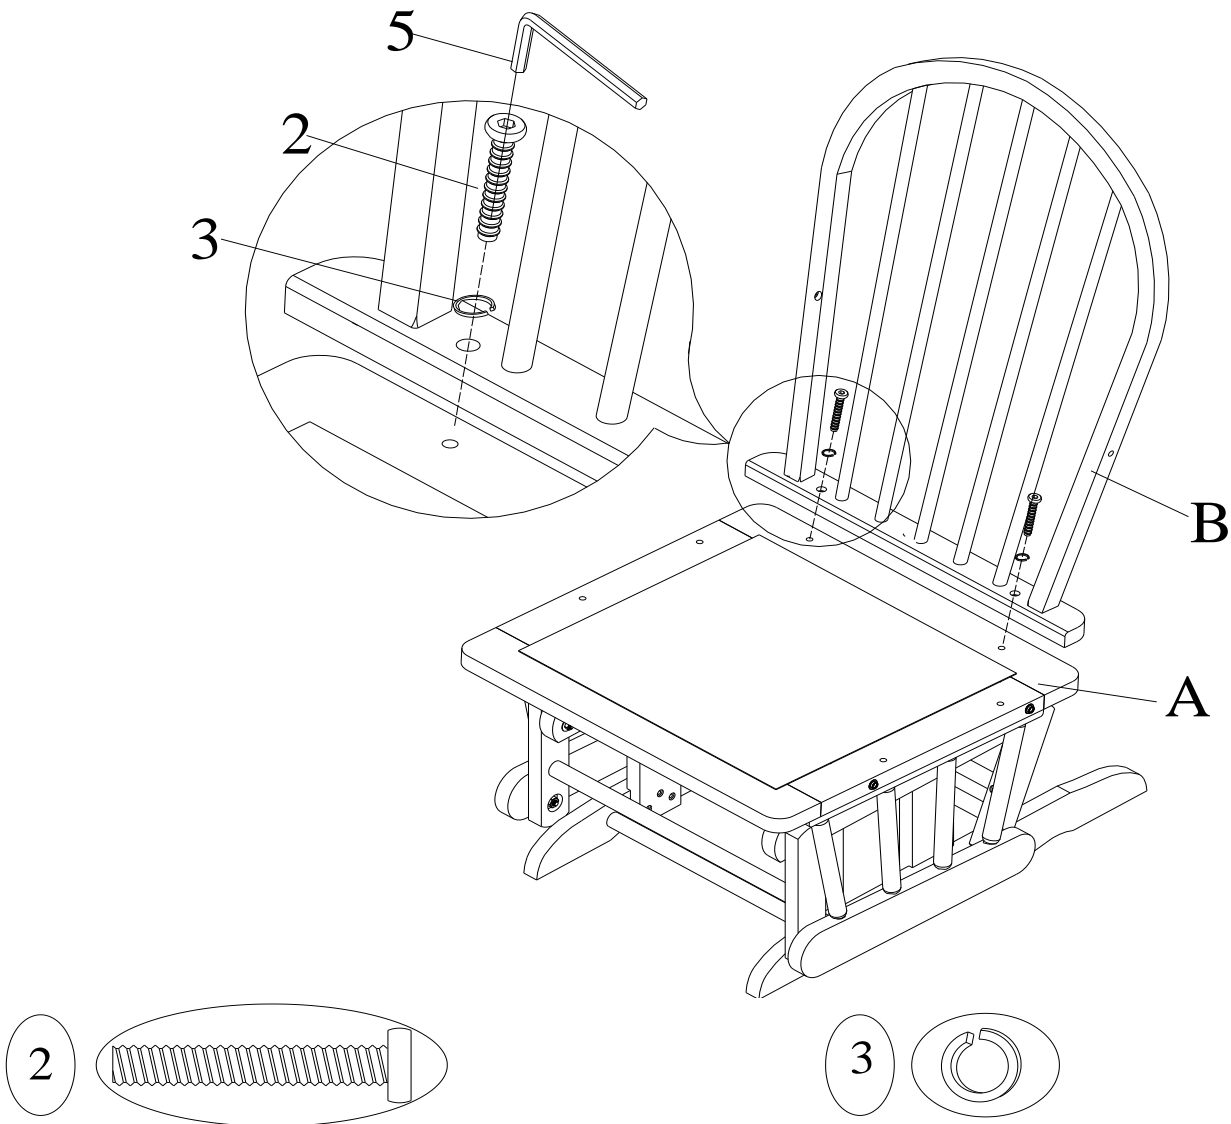


GLIDER ROCKER


TG1642H / TG1642C / TG1642E

STEP 2

- 1: Attach the right arm assembly (GR) to back frame (B) with hex socket head bolt (1), spring washer (3) and barrel nut (4). Insert the barrel nut (4) into the hole underneath the armrest as per detail A.
Insert the hex socket head bolt (1) through the hole in the back frame (B) as per detail A. Use Allen Key (5) to tighten bolts.
 - 2: Attach the right arm assembly (GR) to the base (A) with hex socket head bolts (2) and spring washers (3).
Use Allen key (5) to tighten bolts.
 - 3: Repeat steps 1 and 2 to assemble left arm assembly (GL).
- NOTE :** Do not fully tighten bolts until all bolts have been installed. Once all bolts have been installed, fully tighten bolts installed in previous steps.

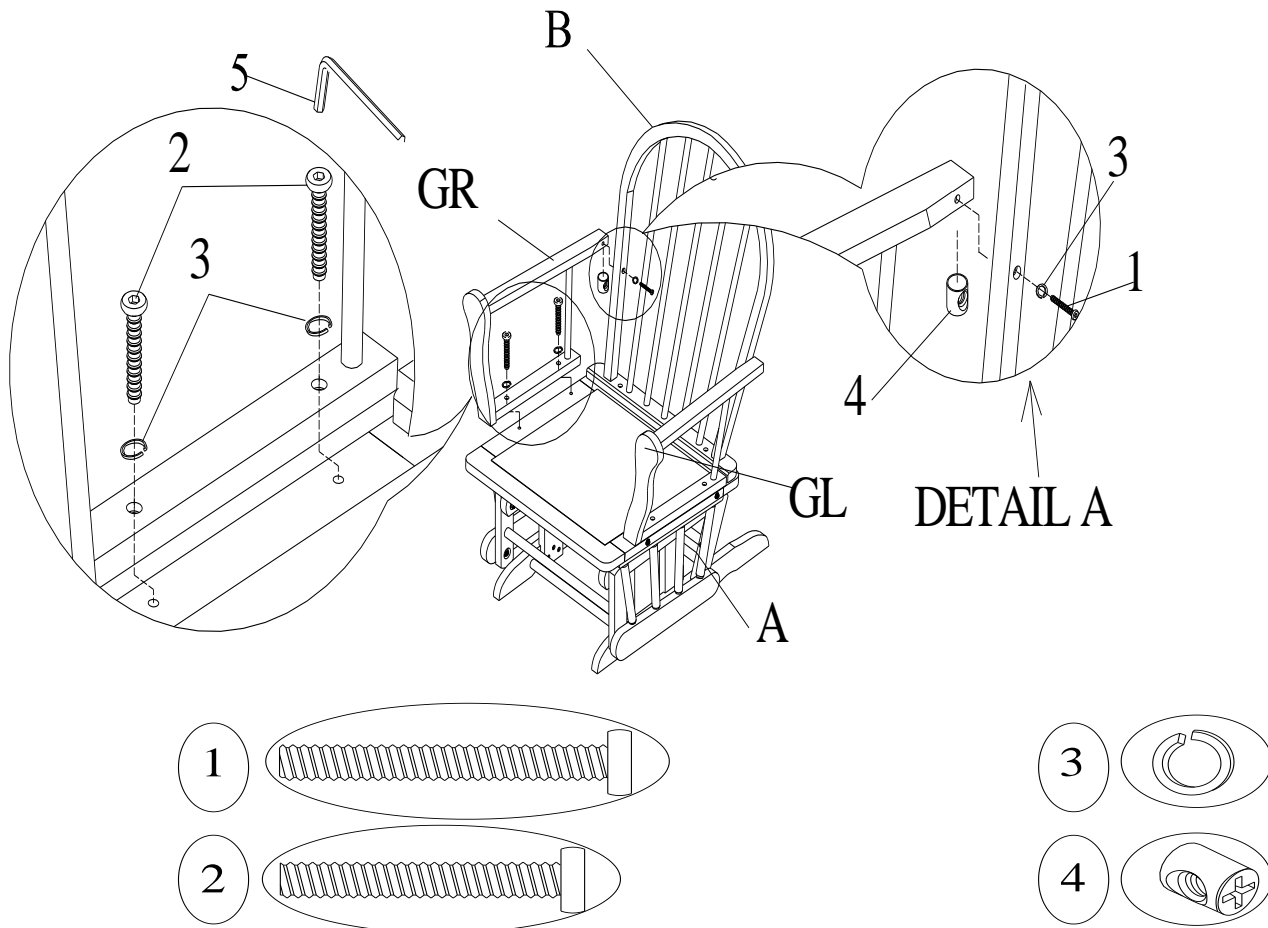


GLIDER ROCKER
TG1642H / TG1642C / TG1642E

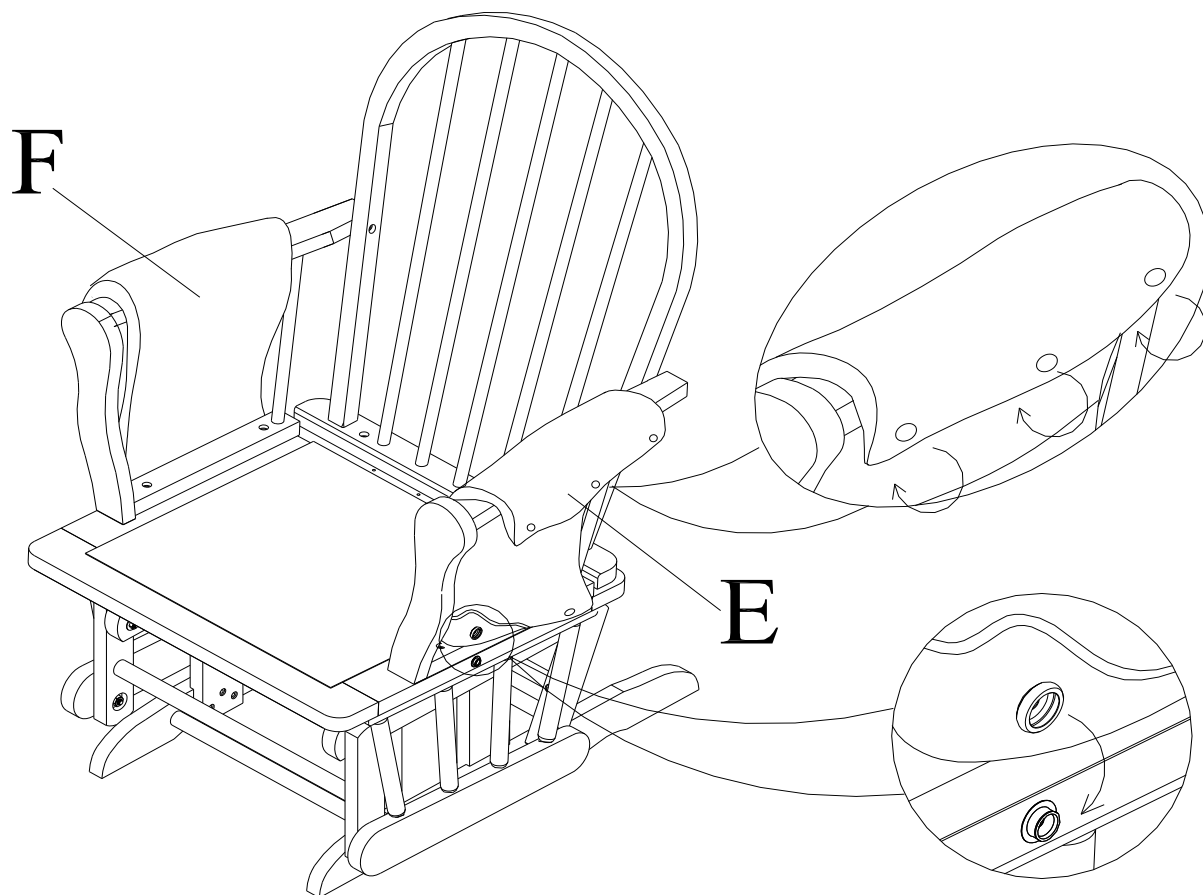

STEP 3

Attach the armrest cushions (E) & (F) to the armrests by buttoning the buttons along with the interior seat and on the sides.


**GLIDER ROCKER
TG1642H / TG1642C / TG1642E**

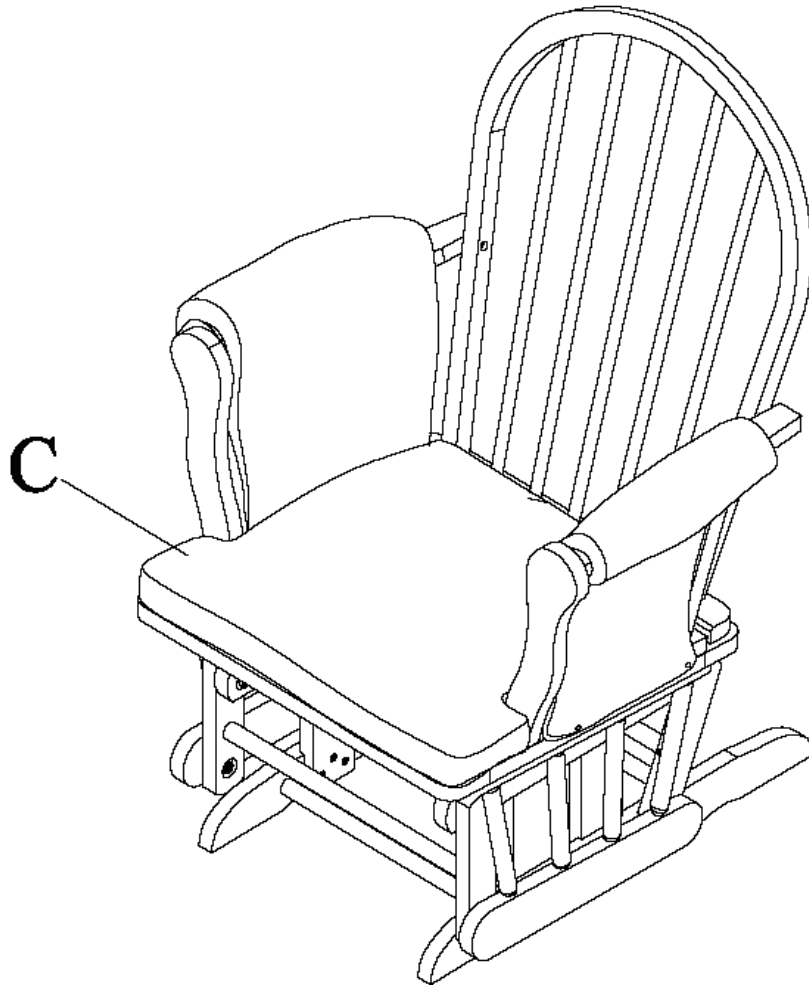

STEP 4

Place the seat cushion (C) onto the base.

**GLIDER ROCKER
TG1642H / TG1642C / TG1642E**

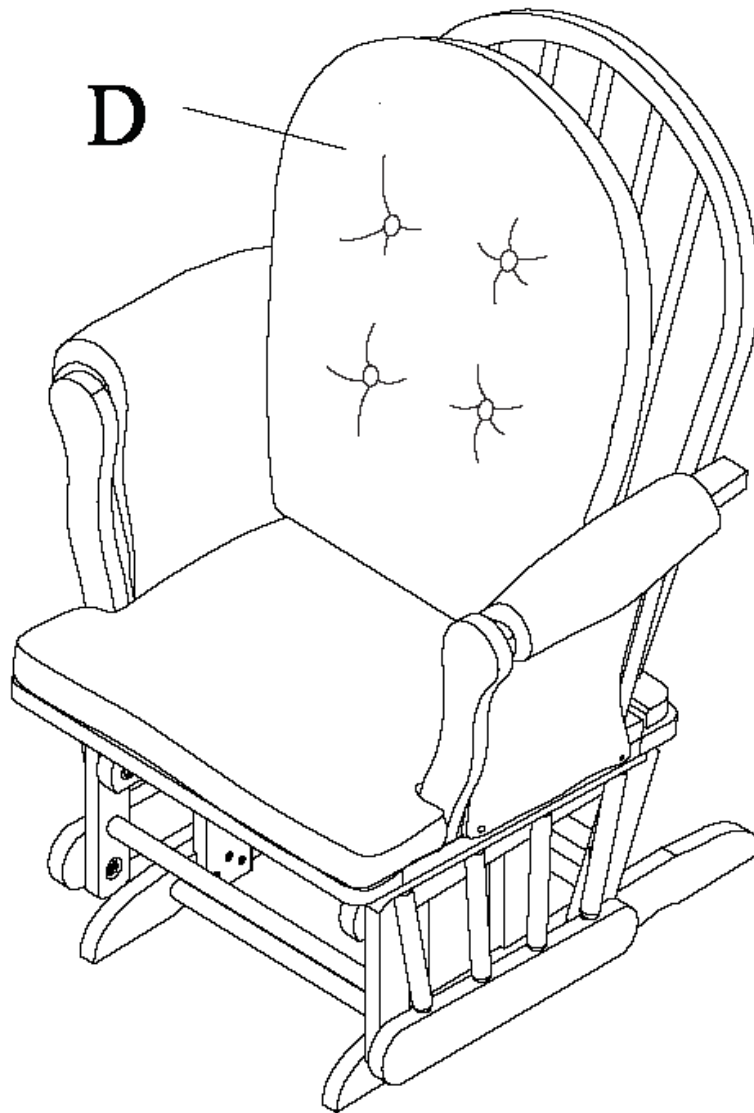


STEP 5
Attach the back cushion (D) to the back frame.

GLIDER ROCKER TG1642H / TG1642C / TG1642E

DO NOT sit on the edge of the seat, armrests or on the backrest as this could cause the chair to tip over.

DO NOT use the chair as a step stool.

DO NOT leave children unattended on or beside the chair.

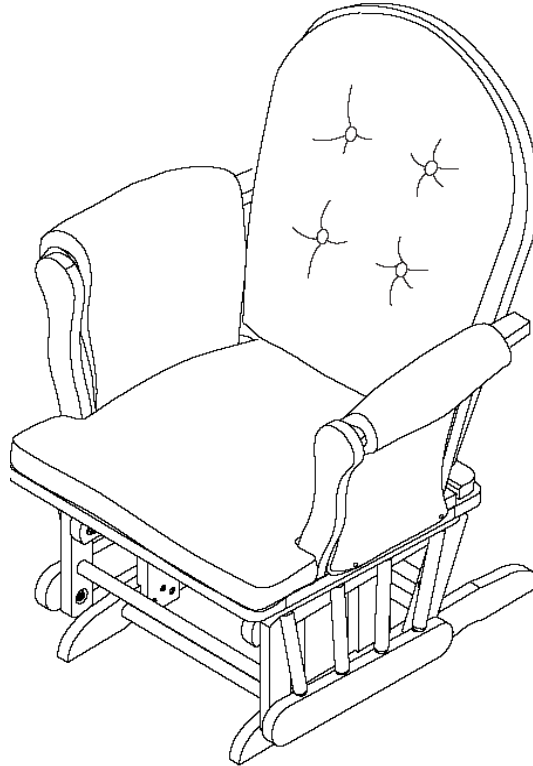

That's it ! You've finished assembling your glider rocker .

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customerservice department. We will replace the part FREE of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Email: das@dorel.com

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:
(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1